 


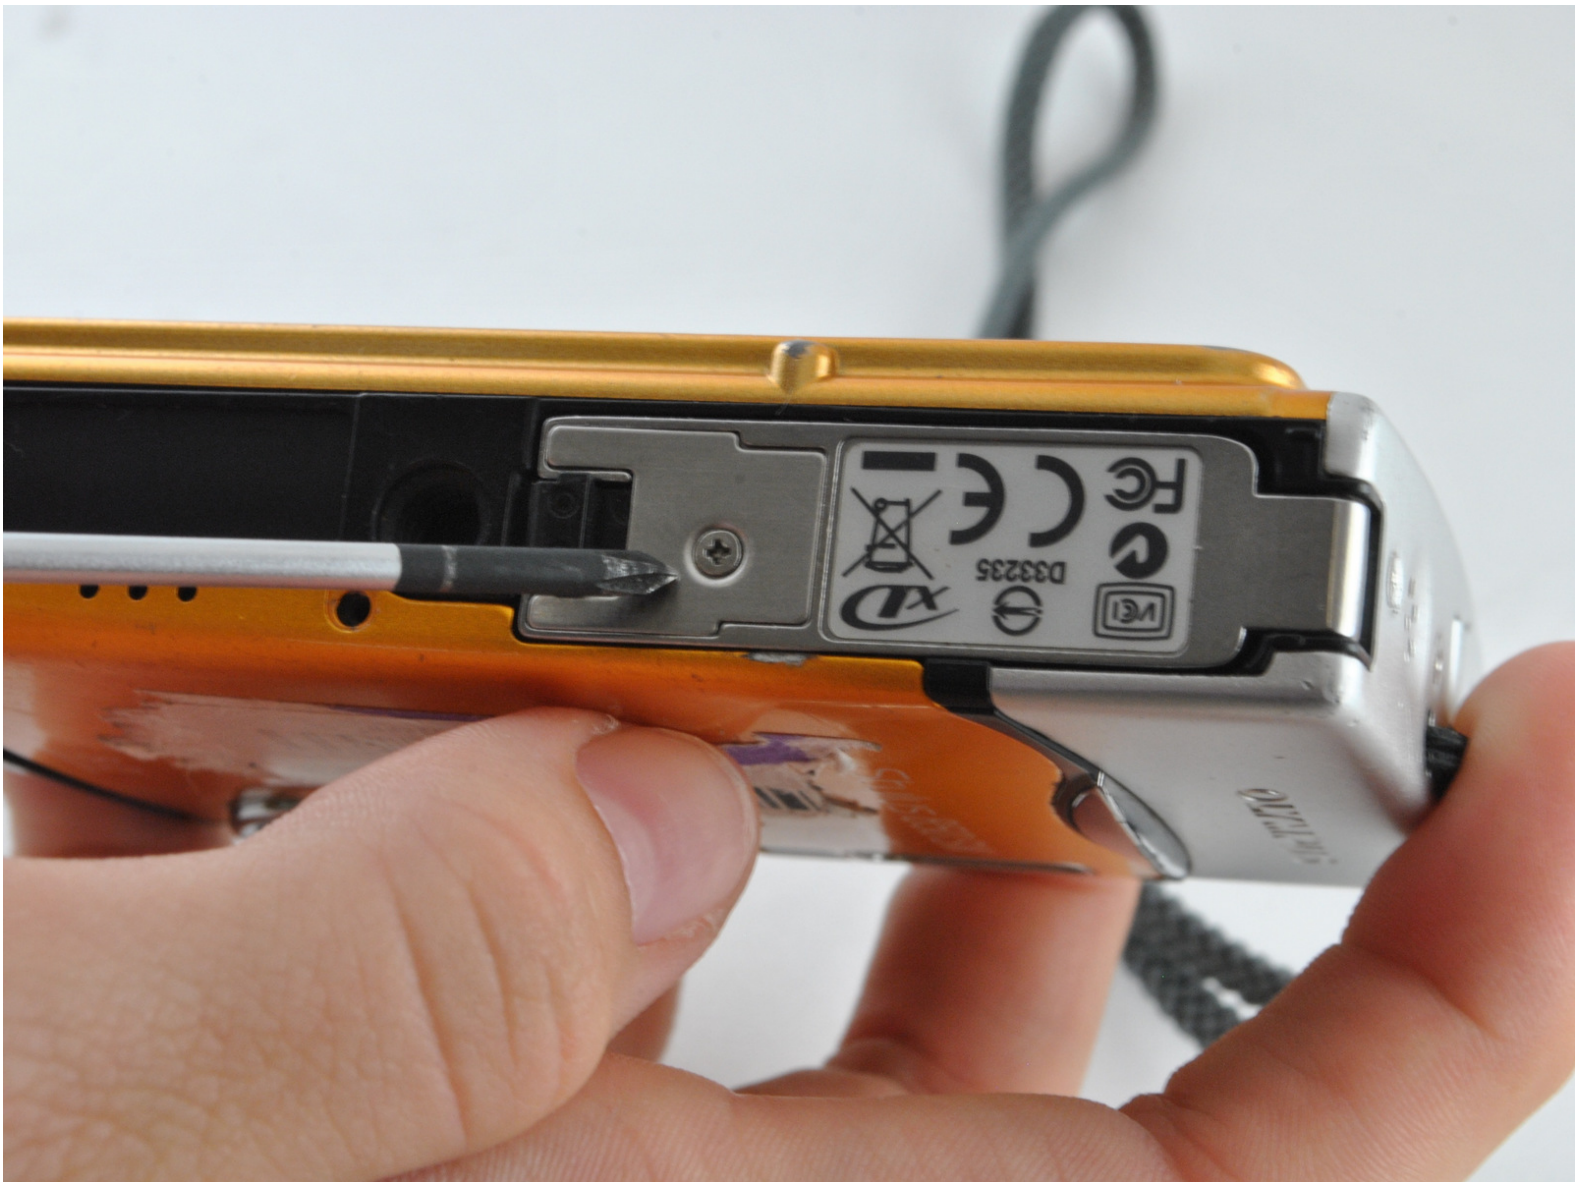

# Olympus 850SW Battery Replacement

This guide will provide a step by step instructions on how to replace the battery latch on an Olympus Stylus 850SW.

Written By: Emma Fincken



## INTRODUCTION

Ensure you have a fully charged battery, and that it is the correct battery if you have purchased a new one. This camera will accept a rechargeable Olympus LI-42B Lithium-Ion battery.



### TOOLS:

 
- [Phillips #00 Screwdriver](#) (1)



### PARTS:

- [Olympus LI-42B Lithium-Ion Battery](#) (1)

## Step 1 — Battery

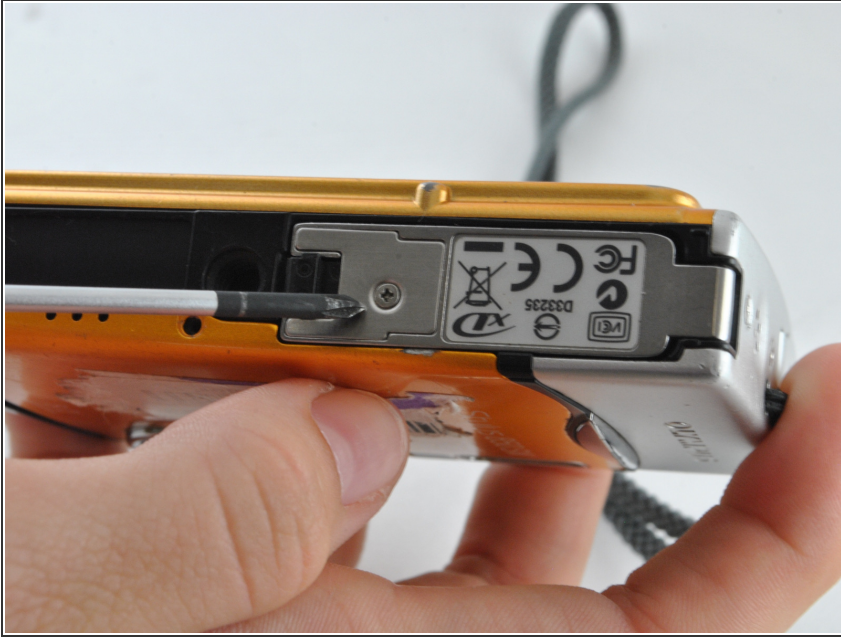

- Locate the battery compartment on the bottom panel of the camera.

## Step 2



- Using a PH00 Phillips Screwdriver, unscrew the one screw located on the latch.

 


## Step 3



- Find the arrows on the compartment, remove the small black plastic piece, and release the latch.

## Step 4

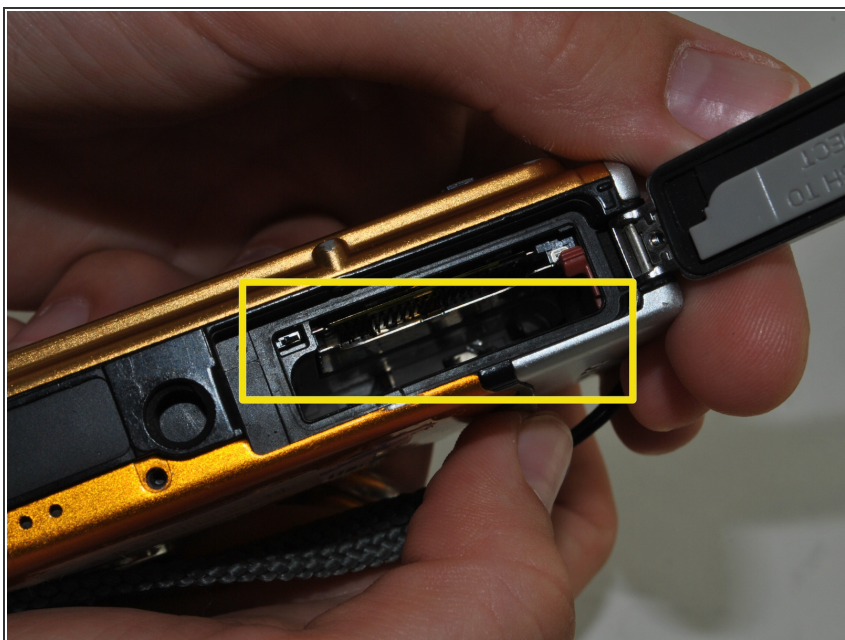

- Allow the latch to completely open and insert the battery, with the writing side up.
- ⓘ The battery slot is the bigger slot. The smaller slot is for the memory card.

## Step 5



- Close the latch. You will hear a click when the compartment is fully closed.

## Step 6



- Place the small black piece back in its' place.

## Step 7



- Place the metal cover back over the closed latch, and screw the screw back in.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-06 09:08:15 PM.